FracTech Laboratories



TECHNOLOGY FACILITY FOR RESERVOIR DEVELOPMENT AND OPTIMISATION

Unit A, Scotswood Park, Forsyth Road, Sheerwater, Woking, Surrey, GU21 5SU, UK. Telephone: +44 (0)1483 755244 Facsimile: +44 (0)1483 755285 Email: info@fractech.co.uk Website: www.fractech.com

ISO 13503-2 SUITE

BASELINE FRACTURE CONDUCTIVITY &

PERMEABILITY

CERAMIC PROPPANT

LWP 20/40 Yuanqu

SUPPLIED BY CMC COMETALS CHINA

WARNING: THIS WORK HAS BEEN PERFORMED BY FRACTECH LTD ON BEHALF OF ITS CLIENT CMC COMETALS CHINA. THE RESULTS ARE STRICTLY CONFIDENTIAL TO CMC COMETALS CHINA.

DISCLAIMER

WHILST FRACTECH LTD. PERSONNEL HAVE MADE EVERY REASONABLE EFFORT TO CONDUCT THIS STUDY WITH CARE, AND REPORT THE RESULTS ACCORDINGLY, THE COMPANY CAN ACCEPT NO RESPONSIBILITY FOR ANY EVENT RESULTING FROM THE USE OF THIS DATA, OR OF ANY INTERPRETATION DRAWN FROM THIS DATA

> Report Prepared: 17th December 2013 Report Number: 009633E CONTACT POINT: +44(0)1483 755244

CONTENTS

| SUM | MARY | | i |
|-----|------|---|---|
| 1. | EXP | ERIMENTAL PROCEDURES | 1 |
| | 1.1 | Specific Gravity | 1 |
| | 1.2 | ISO 13503-2 Methods | 2 |
| | 1.3 | Baseline Fracture Conductivity and Permeability | 3 |
| | | | |

| 2. | . RESULTS | | 6 |
|------|-----------|--|-----|
| | 2.1 | Sieve Analysis | 6 |
| | 2.2 | Bulk Density & Specific Gravity | 7 |
| | 2.3 | Acid Solubility | 7 |
| | 2.4 | Sphericity & Roundness | 8 |
| | 2.5 | Turbidity | 9 |
| | 2.6 | Crush Resistance | 10 |
| | 2.7 | Baseline Fracture Conductivity, Permeability & | |
| | | Pack Width Results | 11 |
| APPE | ENDIX | A: Proppant Photomicrograph | A-1 |

SUMMARY

A sample of LWP 20/40 Yuanqu proppant was provided for testing by CMC COMETALS China, manufactured by Yuanqu Corundum Proppants Corporation.

Testing was carried out in accordance with the ISO 13503-2 suite of tests covering crush resistance, acid solubility, bulk density, sphericity and roundness, turbidity and sieve analysis. Specific gravity testing was also performed.

The baseline conductivity and permeability tests of the sample were performed with a loading of $2lb/ft^2$, at closure stresses of 2, 4, 6, 8, 10 and 12kpsi, at 250°F, each maintained for 50 hours between Ohio sandstone.

A summary of results obtained from the ISO 13503-2 suite of tests is tabulated overleaf. Long term baseline conductivity results are presented in the main report.

Photomicrographs are given in Appendix A.

| Parameters | | LWP 20/40 Yuanqu | |
|--------------------------------------|-------|------------------|--|
| Crush Test (psi) | 7500 | $4.6\pm0.3\%$ | |
| Cr D D D D | 10000 | $8.9\pm0.2\%$ | |
| Sieve A (90% 2 | - | 99.6 ± 0.0 | |
| Sieve A (0.1% | | 0.0 ± 0.0 | |
| Sieve Analysis (1% +16) | | 0.0 ± 0.0 | |
| Mean Size (mm) | | 0.742 ± 0.000 | |
| Bulk Density (g/cm ³) | | 1.50 ± 0.00 | |
| Specific Gravity | | 2.71 ± 0.02 | |
| Acid Solubility (%) | | 5.3 ± 0.1 | |
| Sphericity | | 0.9 ± 0.1 | |
| Roundness | | 0.8 ± 0.1 | |
| Turbidity (FTU) | | 51 ± 9 | |

Table i: Summary of API RP 60 & ISO 13503-2 Test Suite on Proppant Samples

1. EXPERIMENTAL PROCEDURES

1.1 Specific Gravity

A dry density bottle, with stopper, is weighed (W_1). Approximately 30g of proppant is added and the bottle re-weighed (W_2). Mineral oil is added to cover the proppant and fill the bottle 3/4 full. The bottle is vacuumed to an absolute pressure of less than 30 mbar for approximately thirty minutes.

More oil is added to fill the bottle. The stopper is then placed in the neck. Excess oil is wiped off, being careful not to suck oil through the capillary in the stopper. The full bottle is weighed (W_3). The proppant and oil are disposed of and the bottle refilled with mineral oil only. The stopper is placed in the neck and the bottle dried and weighed again (W_4). This procedure is repeated.

The Specific Gravity is then given by,

 $(W_2 - W_1) / ((W_4 - W_3) + (W_2 - W_1))$

1.2 ISO 13503-2 Methods

The following tests were performed in exact accordance with the ISO 13503-2 procedures. The relevant sections are as follows:

| Section | Test/Procedure |
|---------|--|
| 5.2 | Sample Splitting |
| 6 | Sieve Analysis |
| 7 | Sphericity and Roundness |
| 8 | Acid Solubility (tests run using 60% HF as source) |
| 9 | Turbidity |
| 10.3 | Bulk Density |
| 11 | Crush Resistance (with pluviator)* |

Table 1: ISO Procedures

*Crush testing was carried out at pressures of 7500 and 10000psi.

1.3 Baseline Fracture Conductivity and Permeability

The Fracture Conductivity Cells allow for samples of proppant of various loading to be subjected to closure stress and temperature over extended time. Fluids were flowed through the pack and, from differential pressure measurements, the flow capacity of the pack could be determined. A schematic of the experimental set-up is given below. The cell was essentially a modified 10 square inch API conductivity cell.

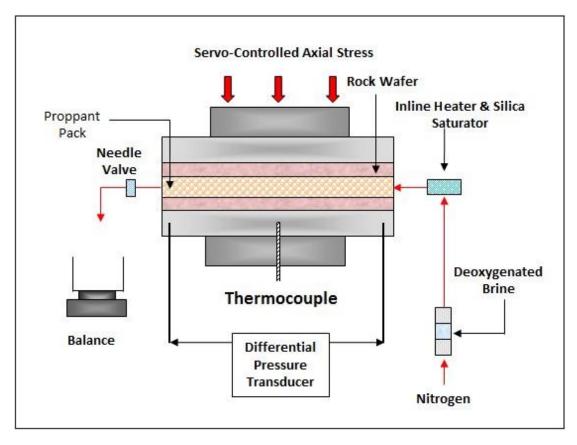


Figure 1: Configuration of Conductivity Cell

The test procedure is as follows:

- Outcrop rocks were selected. For these tests, Ohio Sandstone was used. Ohio Sandstone has a static elastic modulus of approximately 4 million psi and a permeability of ~1mD. Wafers of thickness 9.5mm were machined to 0.05mm precision and one rock was placed in the cell.
- II. The selected proppant was sample split and weighed out. Sample splitting ensured that a representative sample was achieved in terms of its particle size distribution.
- III. In cell 1, the proppant was placed into the cell and levelled. The top rock was then inserted.
- IV. Heated steel platens provided the correct temperature simulation for the test. A thermocouple inserted in the middle port of the cell wall recorded the temperature of the pack. A servo-controlled loading ram provided the closure stress.
- V. The cells were initially set at 80°F and 1000psi. The cells were then heated to 250°F and held for 15 hours at 1000psi before being ramped to 2000psi over 10 minutes. After 15 hours a set of measurements was made before the stress was ramped to 4000psi (total time: 115 hours).
- VI. Further measurements were made at 6000, 8000, 10000 and 12000psi at intervals of 50 hours, corresponding to a total time of 315 hours.

Conductivity measurements were made using the following procedure:

- A 70mbar full range differential pressure transducer was activated by closing the bypass valve and opening the low pressure line valve (the second valve was there to prevent fluid flow bypassing the cell itself while the d.p. bypass was open).
- II. When the differential pressure appeared to be stable, the output was fed to a data logger 5 digit resolution multi-meter which logged the output every second during measurement.
- III. Fluid was collected for 5 to 10 minutes. The flow rate was obtained from a precision stepper pump which accurately controlled and metered flow. The mean value of the differential pressure was retrieved from the multi-meter together with the peak high and low values. If the difference between the high and low values was greater than the 5% of the mean, the data was disregarded.
- IV. Temperature was recorded from the inline thermocouple at the start and end of the flow test period. If the temperature variation was greater than 0.5°K the test was disregarded. Viscosity of the fluid was obtained from using the measured temperature and viscosity tables. For brine at 100psi, no pressure correction was made. The density of brine at elevated temperature is obtained from these tables.
- V. At least three permeability determinations were made at each stage. The standard deviation of the determined permeabilities had to be less than 1% of the mean value for the test sequence to be considered acceptable.
- VI. At the end of the permeability testing, the widths of each of the four corners of the cell were determined using vernier callipers, to 0.01mm resolution.

2. RESULTS

2.1 Sieve Analysis

The result of the sieve analysis is tabulated below:

| | LWP 20/40 Yuanqu | | | |
|-------------------|-----------------------------|-----------------------------|------------------------|-----------------------|
| ASTM Mesh | % Proppant (A) by weight | % Proppant (B) by weight | % Average by weight | Standard Deviation |
| +16 | 0.00 | 0.00 | 0.0 | 0.0 |
| -16 +20 | 0.46 | 0.24 | 0.4 | 0.2 |
| -20 +25 | 69.02 | 69.75 | 69.4 | 0.5 |
| -25 +30 | 29.92 | 29.69 | 29.8 | 0.2 |
| -30 +35 | 0.44 | 0.23 | 0.3 | 0.2 |
| -35 +40 | 0.16 | 0.09 | 0.1 | 0.0 |
| -40 +50 | 0.00 | 0.00 | 0.0 | 0.0 |
| -50 | 0.00 | 0.00 | 0.0 | 0.0 |
| Total | 100.0 | 100.0 | 100.0 | |
| %20/40 | 99.5 | 99.8 | 99.6 | 0.2 |
| Mean Size (mm) | 0.742 | 0.743 | 0.742 | 0.000 |

Table 2: Sieve Analysis LWP 20/40 Yuanqu

2.2 Bulk Density & Specific Gravity

| The result of the bulk density and specific gravity testing is tabulated below | |
|--|--|
| | |

| Sample | Bulk Density (g/cm³) | Standard Deviation (g/cm ³) | Specific Gravity | Standard Deviation |
|---------------------|----------------------------|---|---------------------|-----------------------|
| LWP 20/40 Yuanqu | 1.50 | 0.00 | 2.71 | 0.02 |

2.3 Acid Solubility

The results of the Acid Solubility are tabulated below:

| Sample No. | Test No. | % Loss, by Mass | Average % Loss, by Mass | Standard Deviation % Loss, by Mass | |
|------------|----------|--------------------|-------------------------------|---|--|
| LWP 20/40 | 1 | 5.183 | 5.2 | 0.1 | |
| Yuanqu | 2 | 5.322 | 5.3 | 0.1 | |

Table 4: Acid Solubility Results

2.4 Sphericity & Roundness

| LWP 20/40 Yuanqu | | | | |
|------------------|-----------------------------|-----------------------------|--|--|
| Sample Reference | Sphericity | Roundness | | |
| 1 | 0.9 | 0.9 | | |
| 2 | 0.7 | 0.9 | | |
| 3 | 0.9 | 0.7 | | |
| 4 | 0.9 | 0.9 | | |
| 5 | 0.9 | 0.7 | | |
| 6 | 0.9 | 0.7 | | |
| 7 | 0.9 | 0.7 | | |
| 8 | 0.9 | 0.9 | | |
| 9 | 0.9 | 0.9 | | |
| 10 | 0.9 | 0.9 | | |
| 11 | 0.9 | 0.9 | | |
| 12 | 0.7 | 0.7 | | |
| 13 | 0.9 | 0.7 | | |
| 14 | 0.9 | 0.9 | | |
| 15 | 0.9 | 0.9 | | |
| 16 | 0.9 | 0.9 | | |
| 17 | 0.9 | 0.9 | | |
| 18 | 0.9 | 0.7 | | |
| 19 | 0.9 | 0.9 | | |
| 20 | 0.9 | 0.9 | | |
| | Mean = 0.9 | Mean = 0.8 | | |
| | Standard Deviation = 0.1 | Standard Deviation = 0.1 | | |


Table 5: Sphericity & Roundness

2.5 Turbidity

| The following table and | graph show the spectrophotometer calib | ration. |
|-------------------------|--|---------|
|-------------------------|--|---------|

| Solution/FTU | Transmittance/% |
|--------------|-----------------|
| 0 | 100.5 |
| 40 | 76.3 |
| 80 | 57.4 |
| 120 | 42.0 |
| 160 | 33.2 |
| 200 | 25.1 |
| 240 | 18.7 |
| 280 | 14.6 |
| 320 | 10.9 |
| 400 | 7.2 |

Table 6: Turbidity Calibration

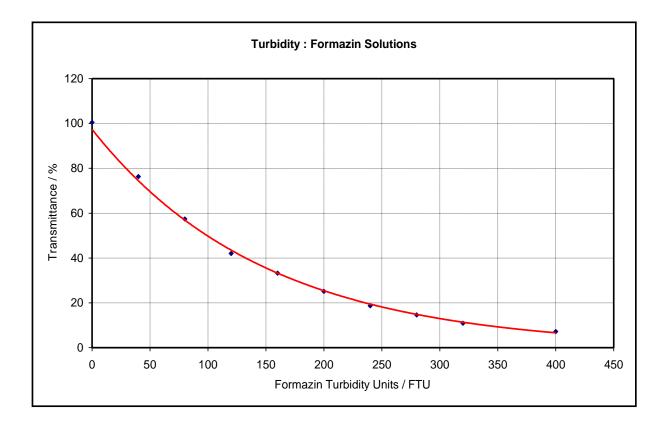

| Sample No. | Measured Sample Transmittance (%) | Turbidity (FTU) | Mean Turbidity (FTU) | Standard Deviation (FTU) |
|---------------------|--|--------------------|----------------------------|--------------------------------|
| LWP 20/40 Yuanqu | 67.6 | 57.0 | 51 | 9 |
| | 74.3 | 44.0 | 51 | |

2.6 Crush Resistance

The result of the Crush Resistance testing is tabulated below.

| | LWP 20/40 Yuanqu | | | | |
|-----------------|---------------------|--------------------------------|--|--|--|
| Stress (psi) | % fines, by mass | Average % fines, by mass | Standard Deviation (% fines, by mass) | | |
| 7500 | 4.39 | 4.0 | 0.3 | | |
| | 4.86 | 4.6 | | | |
| 10000 | 9.08 8.9 | | 0.2 | | |
| | 8.79 | 0.9 | 0.2 | | |


Table 8: Crush Resistance Results


2.7 Baseline Fracture Conductivity & Permeability


The results of the baseline fracture conductivity; permeability and fracture widths are tabulated and plotted below.

| Closure | LWP 20/40 Yuanqu | | | | |
|-----------------|--|-------------------------------------|--------------------|--|--|
| Stress (psi) | Baseline Fracture Conductivity (mDft) | Baseline Permeability (Darcy) | Pack Width (mm) | | |
| 2000 | 13332 | 755 | 5.38 | | |
| 4000 | 10746 | 630 | 5.20 | | |
| 6000 | 7464 | 455 | 5.00 | | |
| 8000 | 3704 | 239 | 4.73 | | |
| 10000 | 1870 | 127 | 4.48 | | |
| 12000 | 913 | 65.0 | 4.28 | | |

Table 9: Baseline Conductivity Results, 2lb/ft², 250°F, Ohio Sandstone

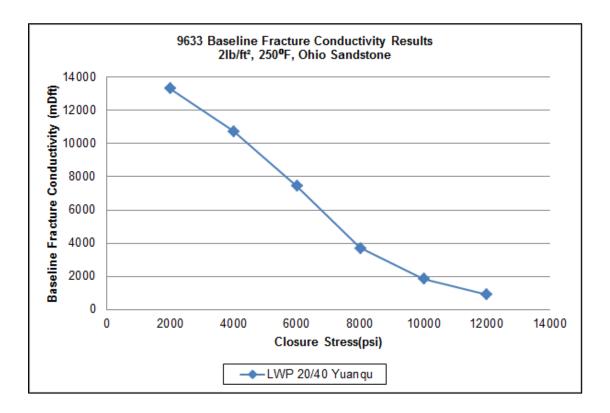

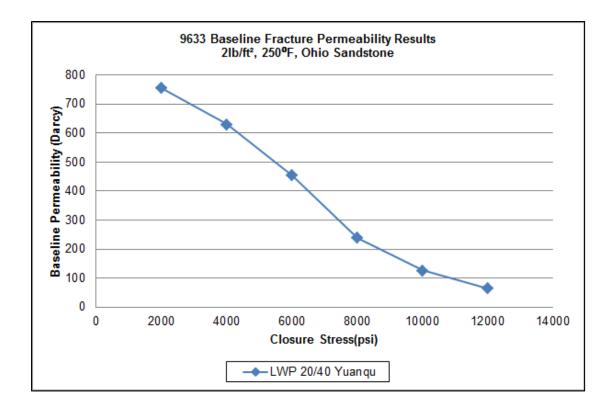

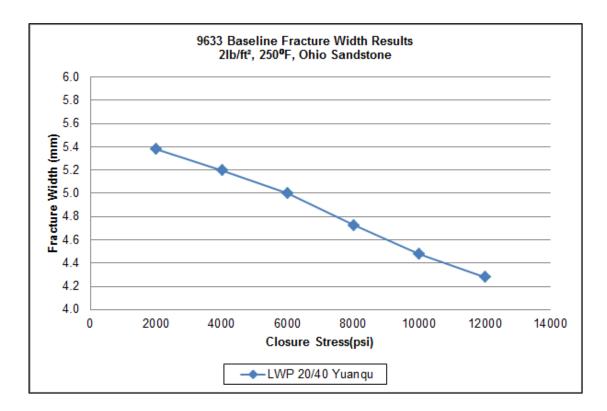

Appendix A

Proppant Photomicrographs



Proppant Sample - LWP 20/40 Yuanqu

